

TRINON

Q- PARATUBES

PASSEND FÜR ALLE IMPLANTATSYSTEME
SUITS ALL IMPLANTS SYSTEMS



TITANIUM

KOMPLETTES SET:

1. BOHRMESSLEHRE Ø 1,5 MM
MIT MARKIERUNGEN 8, 10, 12MM
2. BOHRHILFE 8 MM (ACHSENABSTAND)
3. BOHRHILFE 10 MM (ACHSENABSTAND)
4. BOHRHILFE 12 MM (ACHSENABSTAND)
5. TITANBOX




COMPLETE SET:

1. DEPTH AND AXIS GAUGE Ø 1,5 MM
WITH LASERMARKING 8, 10, 12MM
2. DRILLING GUIDE 8 MM (AXIS DISTANCE)
3. DRILLING GUIDE 10 MM (AXIS DISTANCE)
4. DRILLING GUIDE 12 MM (AXIS DISTANCE)
5. TITANIUM BOX



UNDERSTATEMENT IN PERFECTION

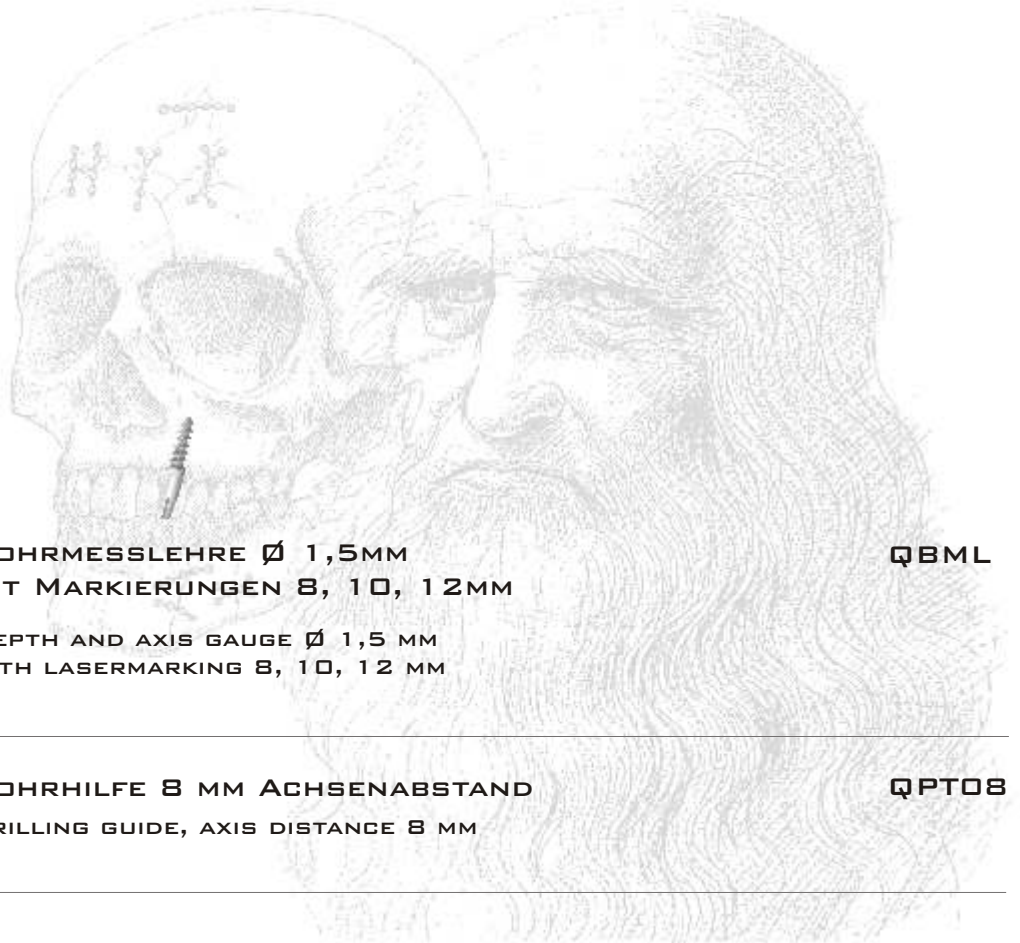

**BOHRMESSLEHRE Ø 1,5MM
MIT MARKIERUNGEN 8, 10, 12MM**

**DEPTH AND AXIS GAUGE Ø 1,5 MM
WITH LASERMARKING 8, 10, 12 MM**

QBML

BOHRHILFE 8 MM ACHSENABSTAND

DRILLING GUIDE, AXIS DISTANCE 8 MM

QPT08

BOHRHILFE 10 MM ACHSENABSTAND

DRILLING GUIDE, AXIS DISTANCE 10 MM

QPT10

BOHRHILFE 12 MM ACHSENABSTAND

DRILLING GUIDE, AXIS DISTANCE 12 MM

QPT12

BOHRHILFE XX MM ACHSENABSTAND (6,7,9,11...)


DRILLING GUIDE, AXIS DISTANCE XX MM (6, 7, 9, 11...)

QPTXX

**KOMPLETTES SET Q-PARATUBES (QPT08, QPT10, QPT12)
MIT BOHRMESSLEHRE UND TITANBOX**

QPTC

**COMPLETE SET OF Q-PARATUBES (QPT08, QPT10, QPT12)
WITH DEPTH AND AXIS GAUGE PACKED IN A TITANIUM BOX**

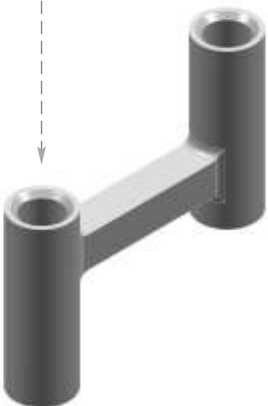

UNDERSTATEMENT IN PERFECTION